IN THE BOX

Wyze Sense Keypad ×1 AA Batteries ×3 Quick Start Guide ×1

ACTIVATION

To use Wyze Sense Keypad, you will f rst need to have set up your Wyze Sense Hub (sold separately) and activated Wyze Home Monitoring Service. To activate your service, enter your activation code through the following link: services.wyze.com.

Note: If you ordered a Wyze Core Starter Kit online, you may activate your Home Monitoring service through your email.

SETUP

Description of the way of the way



If you haven't already activated Home Monitoring, navigate to the Wyze app and go into the Home Monitoring Tab. When your Home Monitoring license is activated, you can tap on the **Start Setup** button. This will guide you through the installation process. Not seeing this screen? Go to services.wyze.com to activate.

To add your device to a previously installed system, open the Wyze app and tap the +plus sign on the top left comer of the Home screen. Tap Add Device and select Wyze Sense Keypad. Follow the instructions in the Wyze app to f nish setup.

INSTALLATION

The Keypad is designed to be mounted on the wall near your door and it connects to the Hub.



Slide the mounting plate of and remove the plastic pull tab

QUICK

START

GUIDE

Press the Reset button

Name your keypad

Dean the desired mounting location and wait for it to dry completely

> Use the adhesive back or screws to secure the mounting plate to the wall

Determine the second term of the terminal plate NOTE: The adhesive is semi-permanent and may peel paint when removed

FCC WARNING:

Any changes or modif cations not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RADIATION EXPOSURE STATEMENT:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISEDC RADIATION EXPOSURE STATEMENT:

This equipment complies with ISEDC RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minumum distance 20cm between the radiator & your body.

Cet appareil est conforme aux limites d'exposition de rayonnement RF ISEDC établies pour un environnement non contrôlé. Cet émetteur ne doit pas être co- implanté ou fonctionner en conjonction avec toute autre antenne ou transmetteur. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.

ISEDC RSS WARNING:

This device complies with ISEDC licence- exempt RSS standard (s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISEDC applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions

suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



Scan the QR code to learn more

NEED HELP?

Contact our support team: https://wyzelabs.zendesk.com

J oin our Community: https://wyze.com/community