


# QUICK START GUIDE

## IN THE BOX

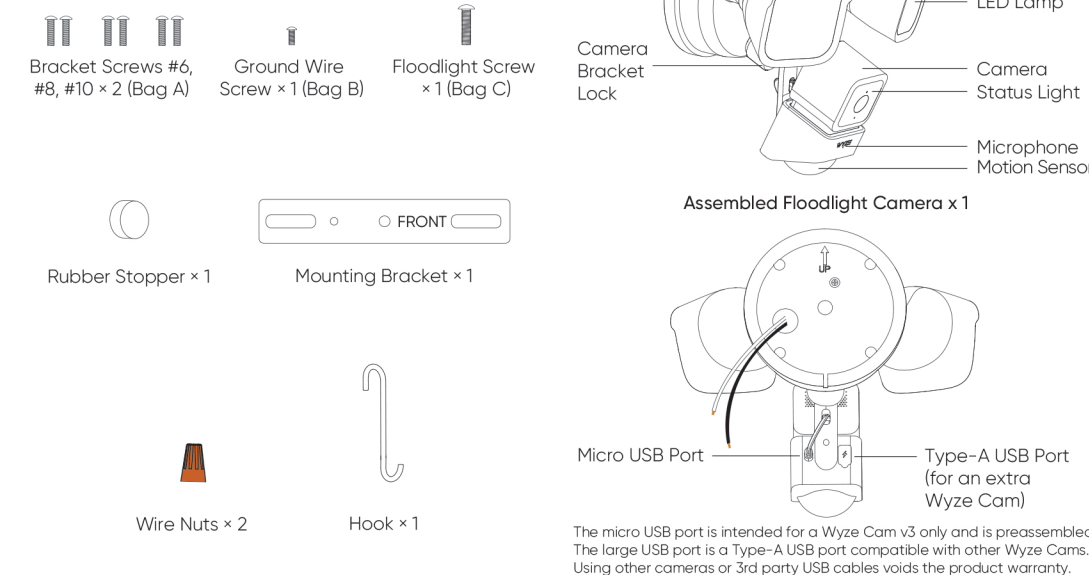

The micro USB port is intended for a Wyze Cam v3 only and is preassembled. The large USB port is a Type-A USB port compatible with other Wyze Cams. Using other cameras or 3rd party USB cables voids the product warranty.

## SETUP

- Download the Wyze app and sign in or create an account.
- Select Add Device > Cameras > Wyze Cam Floodlight and follow the instructions in the app.



- Check your local laws for installation. If you are outside of North America, installation and wiring must be performed by a licensed electrician. Make sure you follow all code standards when doing wire installation.


**WARNING:** Risk of electrical shock!

- Make sure you have a junction box for your floodlight installation. If you need one installed, please contact a licensed electrician.
- Verify that the power supply is a 120 V AC 60 Hz power source.
- Disconnect power using the fuse or circuit breaker before continuing.

Note: Do not use a dimmer switch or timer for this product.




You can mount the floodlight vertically on the wall or overhang under eaves.

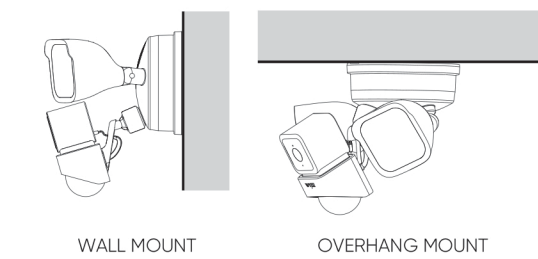


## WALL MOUNT

**Recommended Installation Location**  
Tip: When Wyze Cam Floodlight is mounted 10 feet above the ground, it will detect motion up to 30 feet away.

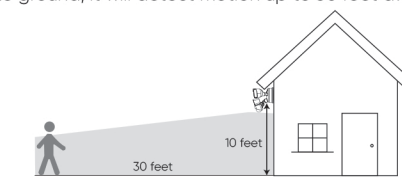


- Take your Wyze Cam Floodlight out of the box. Refer to the sticker on the device and rotate the camera 180° so that the speaker is at the top and the motion sensor is pointed down.

Rotate Camera 180°

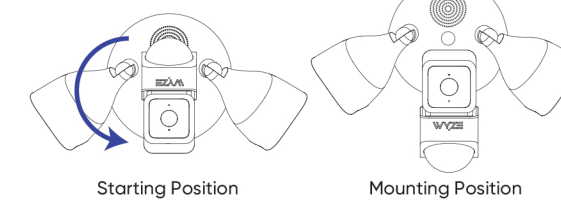


- Remove your existing floodlight and any brackets that may be attached if you are replacing a previous product.
- Place the mounting bracket on the junction box. Align the 2 screw holes and tighten the bracket using matching bracket screws.

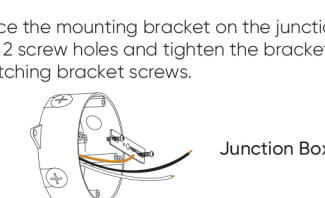


Note: If you don't have a junction box, please find a licensed electrician to install one and follow local building codes.

- Use the ground wire screw to attach the ground wire to the middle of the mounting bracket.

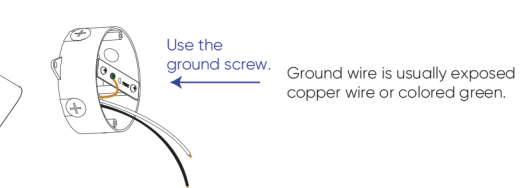


- Hang the floodlight on the mounting bracket using the provided hook as shown in the picture.

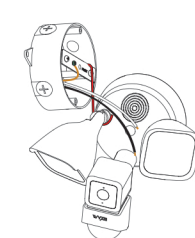

- Connect the hot wire (usually black) from your floodlight to the hot wire from your junction box. Then connect the 2 neutral wires (usually white). Cap the wires using wire nuts and twist them 5-10 times. Gently tug on the wire nut to make sure it's securely attached.


**IMPORTANT:** If you are not sure which wire is which, please consult an electrician for safety.

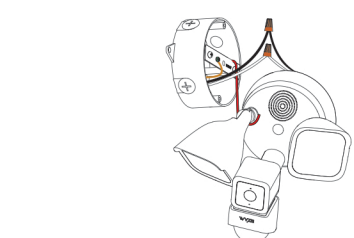


- Push the wires back into the junction box. Make sure the wires are not pinched between Wyze Cam Floodlight and the mounting bracket.
- Screw your Wyze Cam Floodlight to the mounting bracket using the floodlight screw.




- Place the rubber stopper over the floodlight screw to protect the screw.

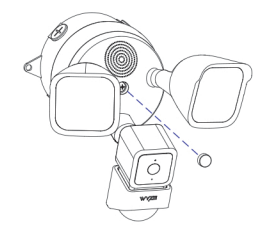

- Now adjust the angle of the motion sensor so it is parallel to the ground.

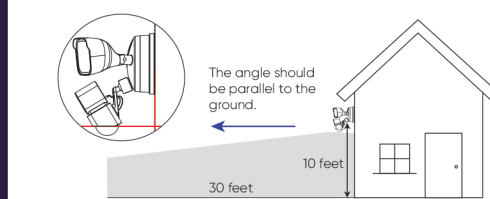


- Take your Wyze Cam Floodlight out of the box. Raise the LED lamps to the highest position first and then rotate it 180° to lower the LED lamp.

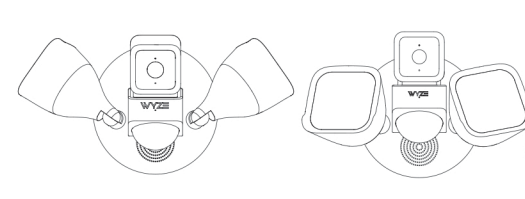


## OVERHANG MOUNT

**Recommended Installation Location**  
Tip: When Wyze Cam Floodlight is mounted 10 feet above the ground, it will detect motion up to 30 feet away.

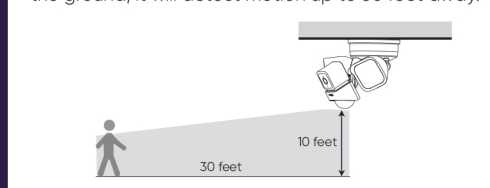


- Starting position
- Tilt lights down

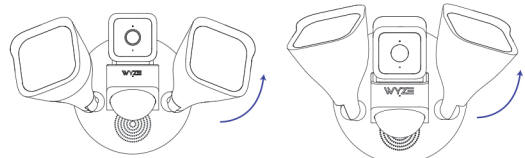

- Rotate the lights 180°
- Tilt lights up




- Tilt the camera slightly up so the camera is looking out and the motion sensor is facing out and downward when mounted overhang.

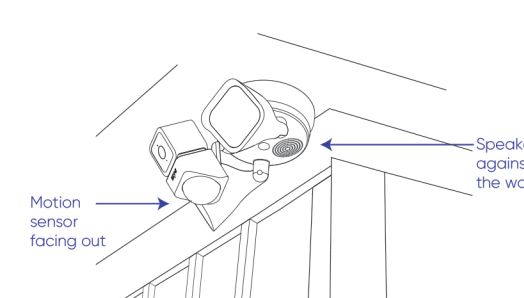


- Remove your existing floodlight and any brackets that may be attached if you are replacing an older floodlight.
- Place the mounting bracket on the junction box. Align the 2 screw holes and tighten the bracket using matching bracket screws.


Note: If you don't have a junction box, please find a licensed electrician to install one and follow local building codes.

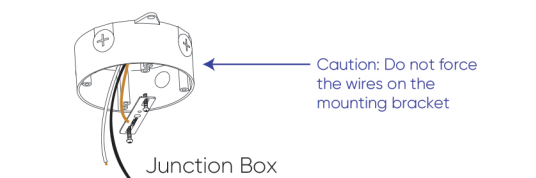

- Use the ground wire screw to attach the ground wire to the middle of the mounting bracket.

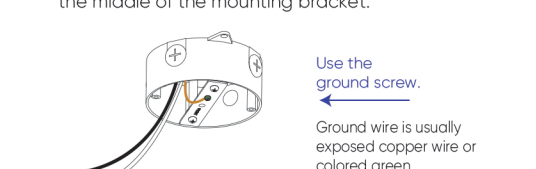


- Hang the floodlight on the mounting bracket using the provided hook as shown in the picture.

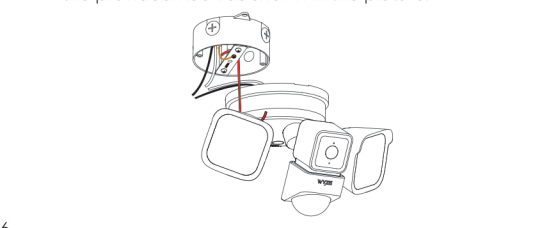


- Connect the hot wire (usually black) from your floodlight to the hot wire from your junction box. Then connect the 2 neutral wires (usually white). Cap the wires using wire nuts and twist them 5-10 times. Gently tug on the wire nut to make sure it's securely attached.

**IMPORTANT:** If you are not sure which wire is which, please consult an electrician for safety.

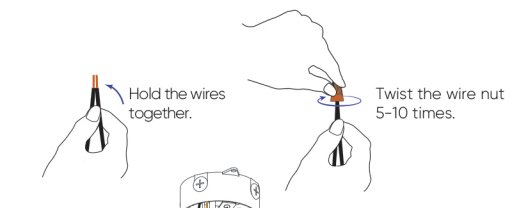

Note: The screw and rubber plug installation steps are the same as 8 and 9 for wall installation.

The next steps are the same for both overhang and wall mounting.

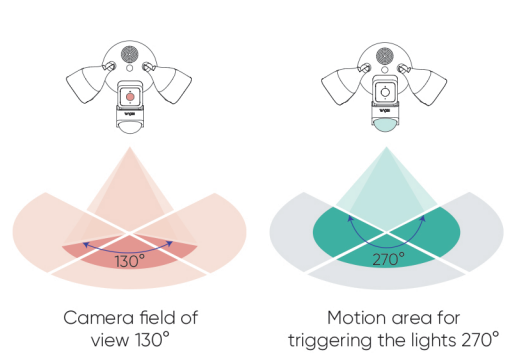


Note: We recommend leaving the ladder in place until after you're done pairing the camera(s) and adjusting the floodlight position.

- Rotate and tilt the floodlight so it points where you want it.

- Restore power to the junction box using the circuit breaker or fuse box. The floodlight will turn on for 15 seconds and the camera status light should flash red.


- Move the Wyze Cam v3 away from its base and press the SETUP button on the bottom of the camera for 3 seconds or until a voice prompt happens.

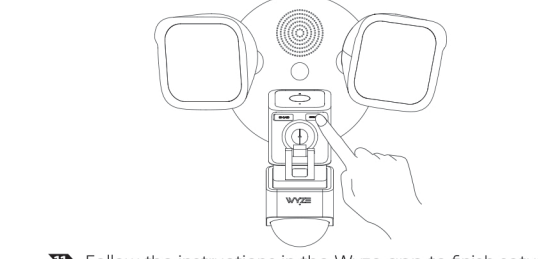

- Follow the instructions in the Wyze app to finish setup.

- Wyze Cam v3 Light Indicators**
- Solid red light**  
The device is powered on and initializing
  - Flashing red light**  
The device is ready to connect
  - Flashing red & blue lights**  
Connection is in progress
  - Flashing blue light**  
The device is connected and finishing setup
  - Solid blue light**  
The device is working properly

Note: The Type-A USB port can be used to add another Wyze Cam.

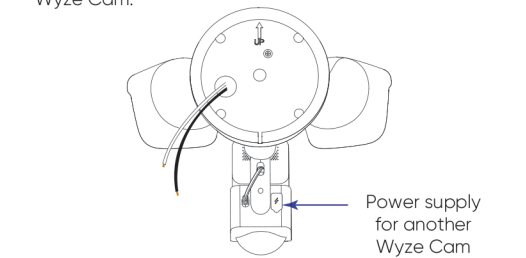

**IMPORTANT:** If this product becomes damaged, please stop using it immediately and contact customer support for assistance.

## FCC Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## RF Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

## ISED RSS Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:  
(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## ISED Radiation Exposure Statement

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body.

Cet équipement est conforme aux limites d'exposition aux rayonnements de la IC établies pour un environnement non contrôlé. Cet équipement doit être installé et fonctionner à au moins 20 cm de distance d'un radiateur ou de votre corps.

## NEED HELP?

Contact our Support Team:  
<https://wyze.com/support>  
Join our Community:  
<https://wyze.com/community>



Version: 2.0